



## TALIA STONE - outdoor cooking centre

### PROJECT DIMENSIONS:

72"(W) x 32"(D) x 34.75"(H)

**Note:** these instructions are designed to accommodate a gas hook-up 27"(W) x 24"(D) BBQ insert. Modifications will be required to accommodate other sizes or propane BBQ models.

### YOU WILL NEED THE FOLLOWING PRODUCT:

147 units	Talia Stone
16 units	Talia Stone Curbing
25 units	Europa Bullnose Pavers
3 units	Europa Pavers 8x12
2 tubes	Concrete Adhesive


#### STEP 1) PREPARING YOUR BASE:

- Remove the sod and other surface material from the area.
- Excavate the area to a depth of approximately 4"(102mm).
- Place 2"(51mm) of crushed stone in this area, level and compact with a hand tamper.
- Note: you can also build on top of an existing paving stone patio.

#### STEP 2) BUILDING YOUR PROJECT:


- Begin by placing your first layer of Talia Stone as shown in (figure #1). This pattern will be used for layers 1, 3 & 5.
- Note: there are additional units placed on the inside of your project for support purposes. The centre support will remain in the same place however the units on either side may vary in placement based on the size of your BBQ insert.

figure #1

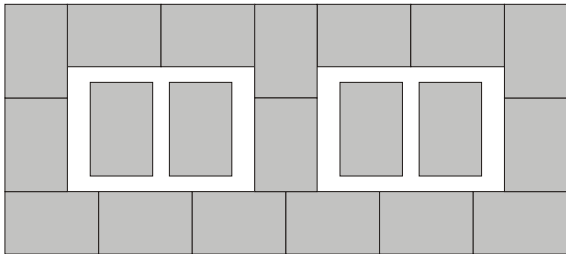


- Use the pattern shown in (figure #2) for layers 2, 4 & 6.

figure #2

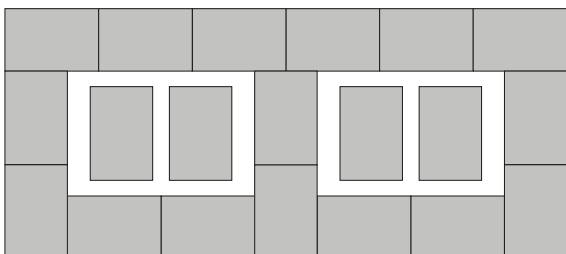


- Once you have built the first 6 layers with Talia Stone, you are ready to add the Talia Stone Curbing as an accent layer. Use concrete adhesive to fasten this layer to the layer below. Follow the pattern shown in (figure #3). Break two curbing units in half to create your four corners.

figure #3

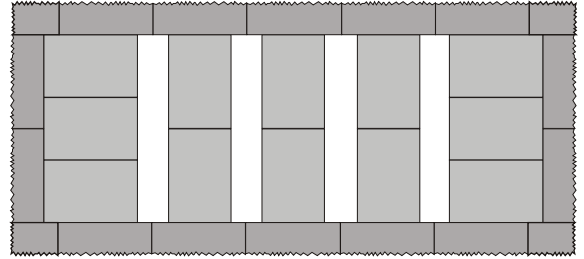

- Use the pattern shown in (figure #4) to install your 8th layer. Use the concrete adhesive to fasten this layer to the layer below. Note: you will need to leave a gap on this layer for your gas hookup. The units in this layer may vary based on the size of your BBQ insert. Please measure your insert prior to gluing any units in place.


figure #4

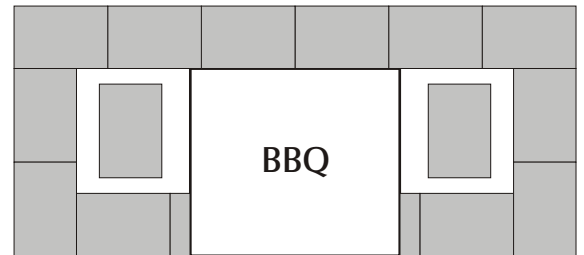

- Use the pattern shown in (figure #5) to install your final layer. Note: this layer is larger than the others in order to create a counter top overhang. Use the concrete adhesive to fasten this layer to the layer below. The 8x12 Europa Pavers are used in the centre of the counter top. Our Europa Bullnose Pavers add the perfect finishing touch to this beautiful "outdoor cooking centre."

*NOW Enjoy!*

figure #5

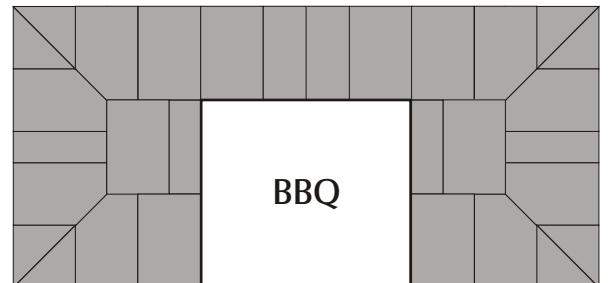

atlashardscapes.com